


UNDERSTANDING DEVICE LIMITATIONS AND SOLUTIONS

Troubleshooting inappropriate therapy for T wave oversensing


Key take-away points

- Oversensing T waves is often a result of a small amplitude R wave.
- Prevention is better than cure, so ensure a large R wave at implant.
- T wave discriminators are available that recognize the interval pattern associated with T wave oversensing.

T wave oversensing

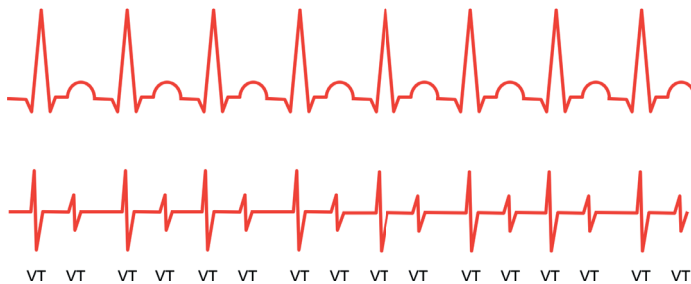

Prevention better than cure

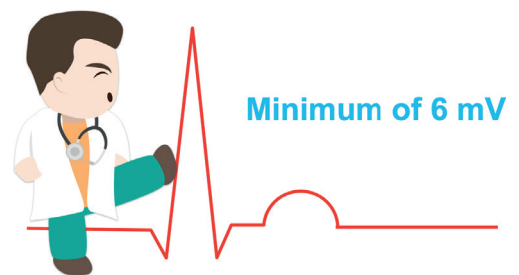

Notes